

PHANTOM BLACK SERIES PROFESSIONAL DIRECT DRIVE PRESSURE WASHERS


FEATURES

- » Honda Engines
- » Industrial Comet triplex pump with external unloader and bypass
- » Heavy duty powder coated steel frame
- » Adjustable pressure
- » Oversized tubed pneumatic tires
- » Thermal relief protection
- » 50 mesh stainless steel inlet filter
- » 3/4" cold rolled steel axle
- » Dual anti-vibration rubber isolators

Units include steel braided non-marking hose, 36" spray wand with molded grip and gun, 5 quick connect spray nozzles, and a high draw chemical injector. Hose reel kits and other options are available. See your PSI dealer for details.



P-B2527HCX

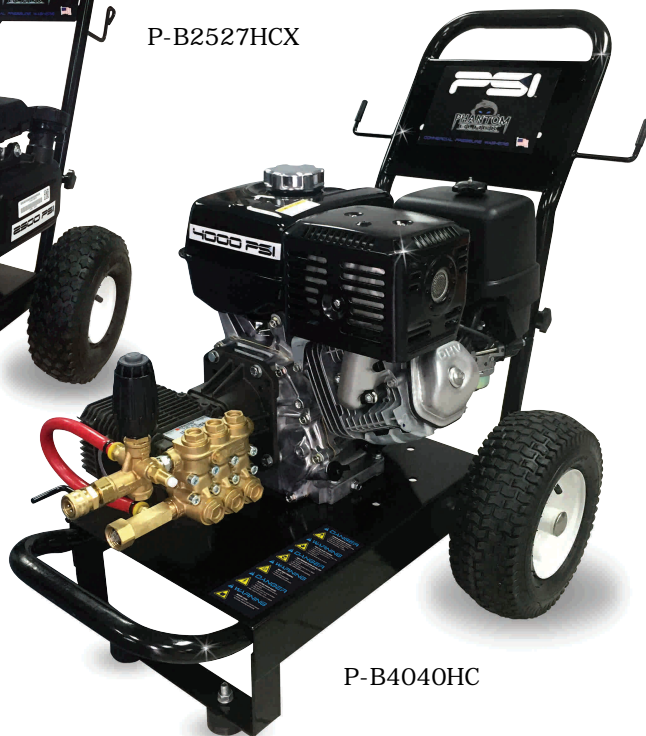


P-B4040HC

POWERED by
HONDA



PSI pressure washers feature Comet pumps for their unmatched quality and life.

5 YEAR
LIMITED
COMET
PUMP
WARRANTY

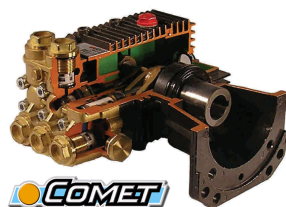

PUMP FEATURES:

- » Forged brass manifold with lifetime warranty
- » Forged bronze connecting rods
- » High efficiency, stainless steel check valves
- » Abrasion proof, heat resistant, solid ceramic plungers
- » High quality oversized bearings
- » Increased fin depth for maximum heat dissipation

3 YEAR
LIMITED
HONDA
ENGINE
WARRANTY

SPECIFICATIONS

MODEL	PSI	GPM	TIRES	ENGINE	PUMP	DIMENSIONS	UNIT WEIGHT
P-B2527HCX	2700	2.5	10"	Honda GC160	BXD2527	34" x 22" x 34"	68 lbs.
P-B3027HC	2700	3.0	10"	Honda GX200	LWD3027	34" x 22" x 34"	83 lbs.
P-B3035HC	3500	3.0	13"	Honda GX270	ZWD3035	39" x 25" x 34"	127 lbs.
P-B4040HC	4000	4.0	13"	Honda GX390	ZWD4040	39" x 25" x 34"	132 lbs.



Pressure Systems Innovations
3750 Investment Lane » Suite 4 » West Palm Beach, FL 33404
Phone: 561.249.2830 » Fax: 561.249.2871 » sales@pressuresystemsinnovations.com
www.PressureSystemsInnovations.com